

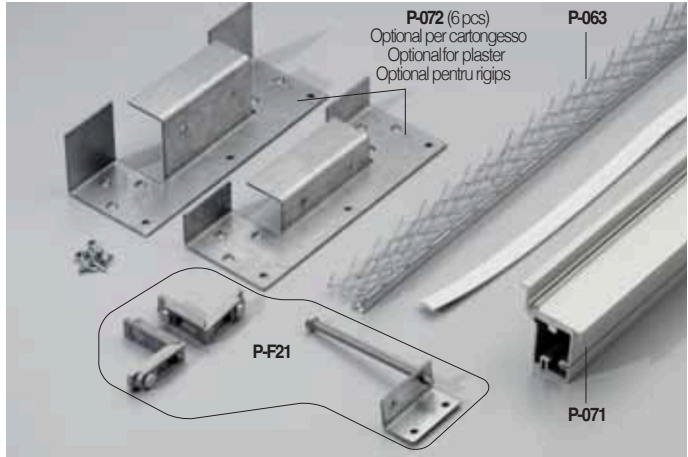
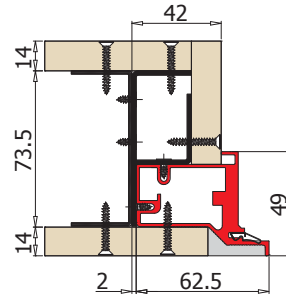


# P-070



STIPITI RASOMURO A SPINGERE / ALUMINIUM FRAME OPENING TO PUSH / TOC FILOMURO DIN ALUMINIU PE SENSUL DE IMPINGERE

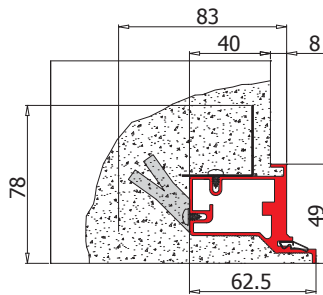

- Stipiti rasomuro a spingere, per applicazione. Porta su cartongesso o muratura.
- Aligned with the wall aluminium frame, opening to push, which can be to the wall or plastered over.
- Toc filomuro din aluminiu - pe sensul de impingere pentru perete din rigips.


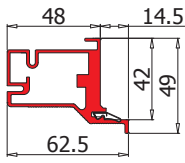


- Applicazione su cartongesso
- Application to the plaster
- Pentru rigips

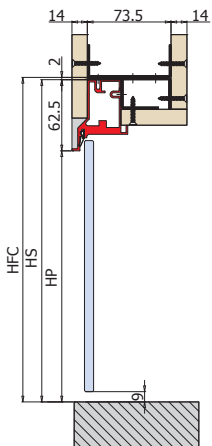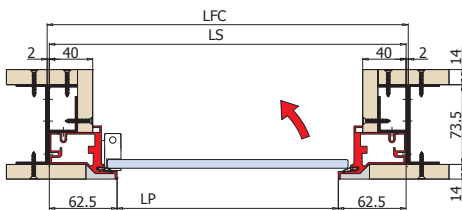

$$\begin{aligned} \text{LFC} &= \text{LP} + 129 \\ \text{HFC} &= \text{LP} + 65 \\ \text{LS} &= \text{LP} + 125 \\ \text{HS} &= \text{HP} + 62.5 \end{aligned}$$

- Applicazione su muratura
- Application to the wall
- Pentru zidarie

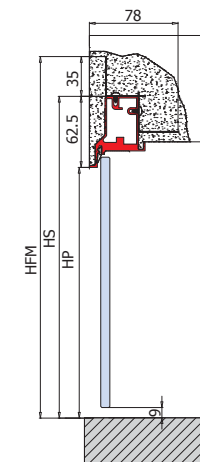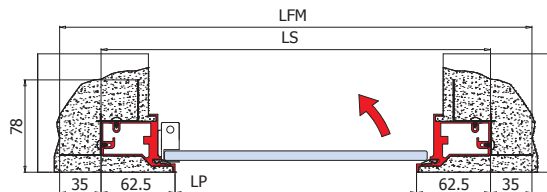

$$\begin{aligned} \text{LFM} &= \text{LP} + 195 \\ \text{HFM} &= \text{LP} + 98 \\ \text{LS} &= \text{LP} + 125 \\ \text{HS} &= \text{HP} + 62.5 \end{aligned}$$

	LFC- HFC		LFM- HFM		LP- HP		LS- HS	
	latime width	inaltime height	latime width	inaltime height	latime width	inaltime height	latime width	inaltime height
Usi standard	830	2165	885	2198	700	2100	825	2163
Standard	900	2165	995	2198	800	2100	925	2163
doors	1030	2165	1095	2198	900	2100	1025	2163